


S5800-48F45R/S5800-48T4S

MANAGED L2/L3 ROUTING SWITCHES

Quick Start Guide **V1.0**

Introduction

Thank you for choosing S5800 Series switches. This guide is designed to familiarize you with the layout of the switches and describe how to deploy the switches in your network.

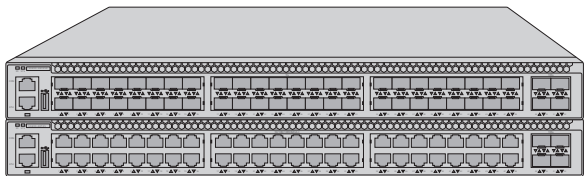


S5800-48F4SR
OctoGate Bezeichnung:
SW-4003-P48-SFP+

S5800-48T4S
OctoGate Bezeichnung:
SW-4003-P48-RJ45


Accessories



Power Cord x2



Console Cable x1



Network Cable x1




Grounding Cable x1



Rubber Pad x4



M4 Screw x10




Mounting Bracket x2


Hardware Overview

Front Panel Ports

S5800-48F4SR

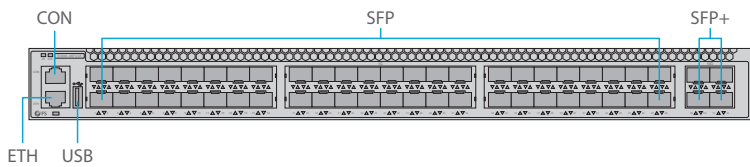


S5800-48T4S

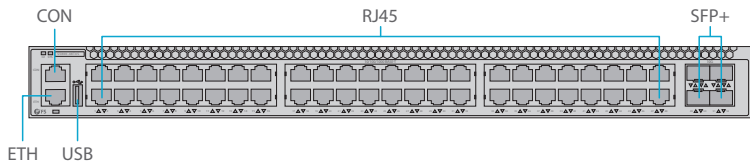


Ports	Description
RJ45	10/100/1000BASE-T ports for Ethernet connection
SFP	Hot-swappable SFP ports for 1G connection
SFP+	Hot-swappable SFP+ ports for 1/10G connection
CON	An RJ45 console port for serial management
ETH	An RJ-45 Ethernet management port
USB	A USB management port for software and configuration backup and offline software upgrade

Front Panel LEDs

S5800-48F4SR

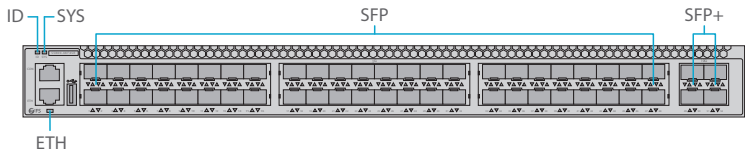


S5800-48T4S

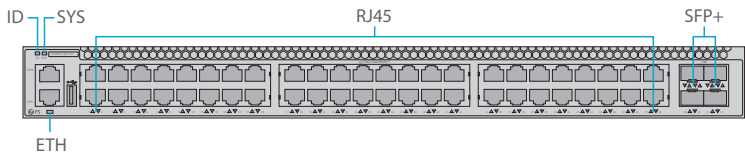

LEDs	Status	Description
ID	Blue	ID indication function enable.
	Off	ID indication function disable.
SYS	Green	The system is normally running.
	Amber	The system occurs alarm or error.
	Off	No power or no system runs or system runs abnormally.
ETH	Green	Port is linked.
	Blinking Green	Port is receiving or transmitting packets.
	Off	Port is not linked.
RJ45/SFP	Green	1G port is linked.
	Blinking Green	1G packets are receiving or transmitting.
	Amber	10/100M port is linked.
	Blinking Amber	10/100M packets are receiving or transmitting.
	Off	Port is not linked.
SFP+	Green	10G port is linked.
	Blinking Green	10G packets are receiving or transmitting.
	Amber	1G port is linked.
	Blinking Amber	1G packets are receiving or transmitting.
	Off	Port is not linked.

Back Panel

S5800-48F45R/S5800-48T4S

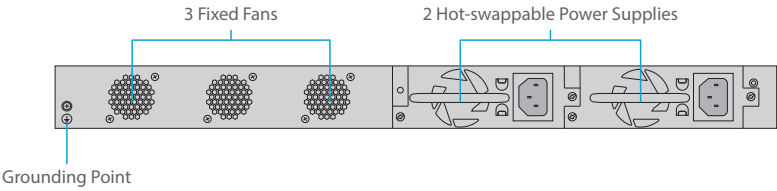

Installation Requirements

Before you begin the installation, make sure that you have the following:


- Phillips screwdriver.
- Standard-sized, 19" wide rack with a minimum of 1U height available.
- Category 5e or higher RJ45 Ethernet cables for connecting the network devices.

Site Environment:

- Do not operate it in an area that exceeds an ambient temperature of 45°C.
- The installation site must be well ventilated. Ensure that there is adequate air flow around the switch.
- Be sure that the switch is level and stable to avoid any hazardous conditions.
- Do not install the equipment in a dusty environment.
- The installation site must be free from leaking or dripping water, heavy dew, and humidity.
- Ensure rack and working platforms are well earthed.


Mounting the Switch

Desk Mounting

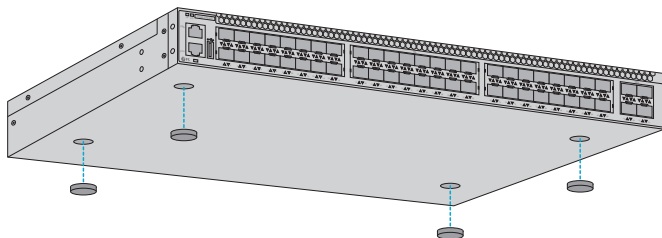


1. Attach four rubber pads to the bottom.
2. Place the chassis on a desk.

Rack Mounting

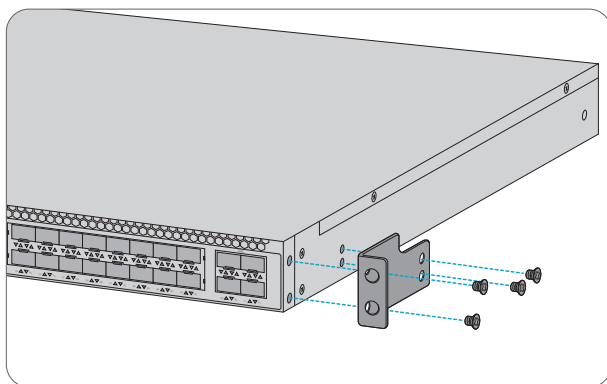


1. Secure the mounting brackets to the two sides of the switch with eight M4 screws.

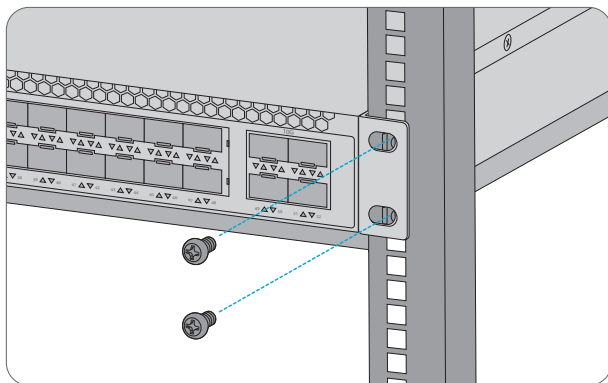

2. Attach the switch to the rack using four M6 screws and cage nuts.

Grounding the Switch

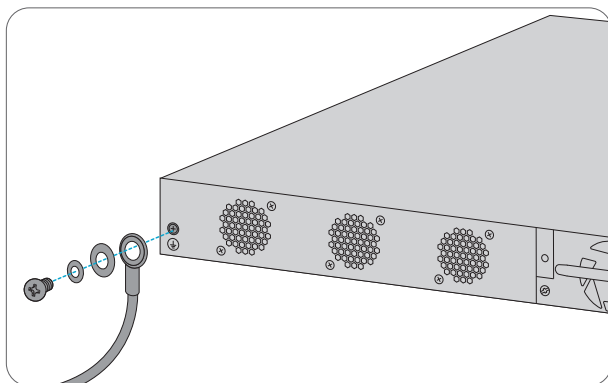


1. Connect one end of the grounding cable to a proper earth ground, such as the rack in which the switch is mounted.
2. Secure the grounding lug to the grounding point on the switch back panel with the washer and screws.




CAUTION: The earth connection must not be removed unless all supply connections have been disconnected.

Connecting the Power

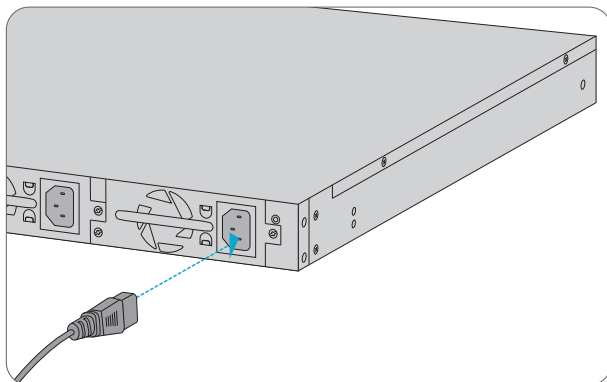

1. Plug the AC power cord into the power port on the back of the switch.
2. Connect the other end of the power cord to an AC power source.

Connecting the SFP/SFP+ Ports

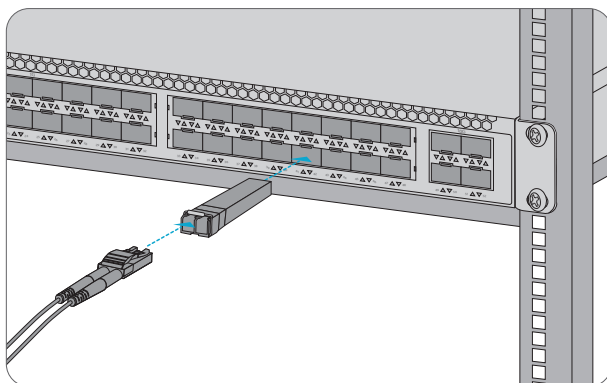


1. Plug a compatible SFP/SFP+ transceiver into the SFP/SFP+ port.
2. Connect a fiber optic cable to the fiber transceiver. Then connect the other end of the cable to another fiber device.



CAUTION: Laser beams will cause eye damage. Do not look into bores of optical modules or optical fibers without eye protection.


Connecting the Management Ports

Connecting the Console Port

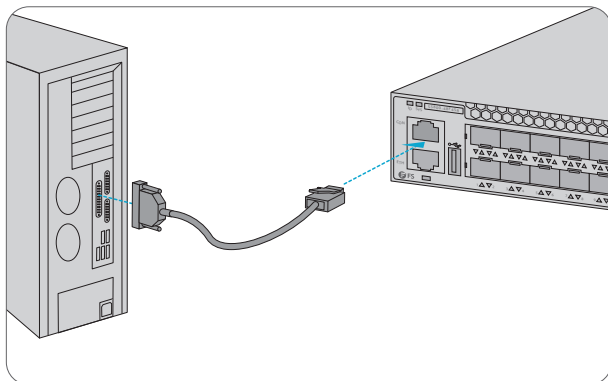


1. Insert the RJ45 connector of the console cable into the RJ45 console port on the front of the switch.
2. Connect the other end of the console cable to the RS-232 serial port on the computer.

Connecting the ETH Port

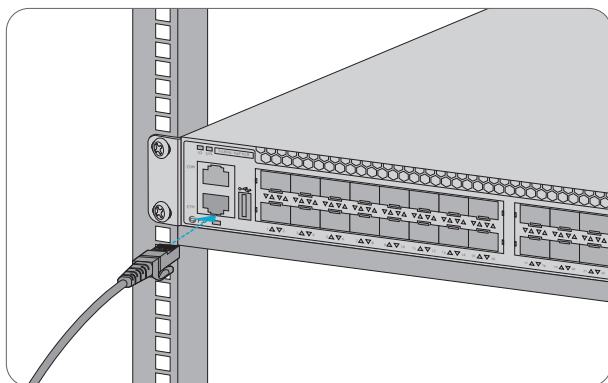

1. Connect one end of a standard RJ45 Ethernet cable to a computer.
2. Connect the other end of the cable to the ETH port on the front of the switch.

Connecting the USB Port

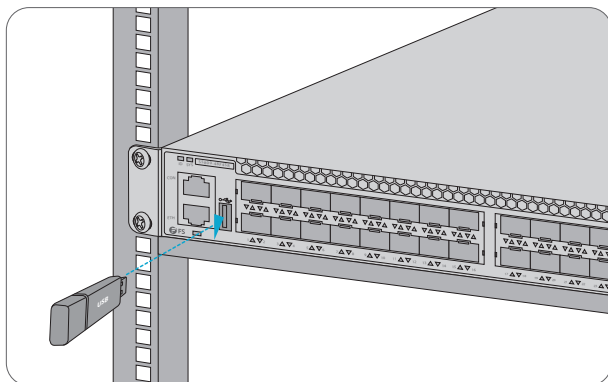

Insert the Universal Serial Bus (USB) flash disk to the USB port for software and configuration backup and offline software upgrade.

Configuring the Switch

Configuring the Switch Using the Web-based Interface

Step1: Connect the computer to the Management port of the switch using the network cable.

Step 2: Set the IP address of the computer to **192.168.1.x**. ("x" is any number from 2 to 254.). Set the subnet mask of the computer to **255.255.255.0**.

A screenshot of the "Internet Protocol Version 4 (TCP/IPv4) Properties" dialog box. The "General" tab is selected. The text says: "You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings." There are two radio buttons: "Obtain an IP address automatically" (unselected) and "Use the following IP address:" (selected). Under "Use the following IP address:", there are three input fields: "IP address:" with the value "192 . 168 . 1 . 2", "Subnet mask:" with the value "255 . 255 . 255 . 0", and "Default gateway:" with the value ". . . .". Below these are two more radio buttons: "Obtain DNS server address automatically" (unselected) and "Use the following DNS server addresses:" (selected). Under "Use the following DNS server addresses:", there are two input fields: "Preferred DNS server:" with the value ". . ." and "Alternate DNS server:" with the value ". . .". At the bottom, there is a checkbox "Validate settings upon exit" (unchecked) and a button "Advanced...". At the very bottom are "OK" and "Cancel" buttons.

- Step 3: Open a browser, type **http://192.168.1.1**, and enter the default username and password, **admin/admin**.
- Step 4: Click sign in to display the web-based configuration page.

Configuring the Switch Using the Console Port

- Step 1: Connect a computer to the switch's console port using the supplied console cable.
- Step 2: Start the terminal simulation software such as HyperTerminal on the computer.
- Step 3: Set the parameters of the HyperTerminal: 115200 bits per second, 8 data bits, no parity, 1 stop bit and no flow control.

Quick Connect

Protocol:Serial

Port:COM3

Baud rate:115200

Data bits:8

Parity:None

Stop bits:1

Name of pipe:

Flow Control

☐ DTR/DSR

☐ RTS/CTS

☐ XON/XOFF

☐ Show quick connect on startup

☒ Save session

☒ Open in a tab

Connect

Cancel

- Step 4: Enter the default username and password, **admin/admin**.

Troubleshooting

Loading Failure Troubleshooting

After loading fails, the system will keep running in the original version. At this time, users should re-check if physical port connections are good firstly. If some ports are not connected, then re-connect them to ensure that physical connections are correct, and begin re-loading. If physical connections are correct, then check the loading process information displayed on the super terminal to verify if there are input errors. If there are input errors, correct them and re-load.

User Password Lost Troubleshooting

If system password is lost or forgotten, the following method can be used to reset the password:

1. Connect the console port of the switch to the computer through the console cable.
2. Press ctrl + b to enter the Uboot mode.
3. Start the system with an empty configuration file with no password.

```
Bootrom#boot_flash_nopass
```

```
Bootrom#Do you want to revert to the default config file?[Y|N|E]:
```



NOTE: Forgetting your username and password and restoring them through console port may cause configuration loss and business interruption. Please remember your username and password.

Configuration System Troubleshooting

1. Make sure the power supply is normal and the console cable is properly connected.
2. Check if the console cable is the right type.
3. Check if the control cable driver is properly installed on the computer.
4. Ensure the parameters of the HyperTerminal are correct.

Support and Other Resources

- Download <https://www.fs.com/download.html>
- Help Center https://www.fs.com/service/help_center.html
- Contact Us https://www.fs.com/contact_us.html

Product Warranty

FS ensures our customers that any damage or faulty items due to our workmanship, we will offer a free return within 30 Days from the day you receive your goods. This excludes any custom made items or tailored solutions.



Warranty: S5800 Series Switches enjoy 5 years limited warranty against defect in materials or workmanship. For more details about warranty, please check at <https://www.fs.com/policies/warranty.html>



Return: If you want to return item(s), information on how to return can be found at https://www.fs.com/policies/day_return_policy.html